



A. To install the HOOKER on a Rack-A-Tier, remove the spring-loaded 'slide' from the HOOKER body by squeezing the tabs and separating the two parts. See diagram.




B. Insert the HOOKER body into the Rack-A-Tier handle and reinstall the slide. The tool rest just pushes into the centre hole of the Rack-A-Tier. It can be stored in any of the five holes. See diagram.

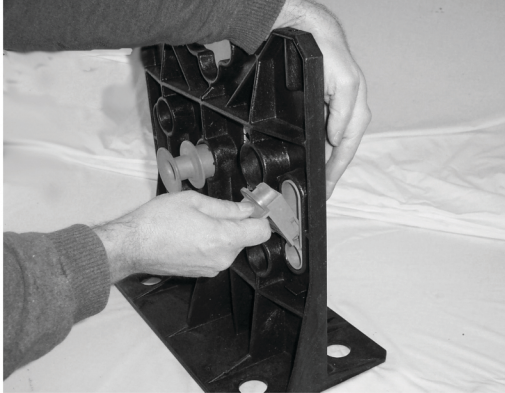


C. Install the hook by pulling back the slide while bracing forefingers on the rib of the Rack-A-Tier. Rotate the hook to the horizontal position pointing away from the centre of the Rack-A-Tier. See diagram.

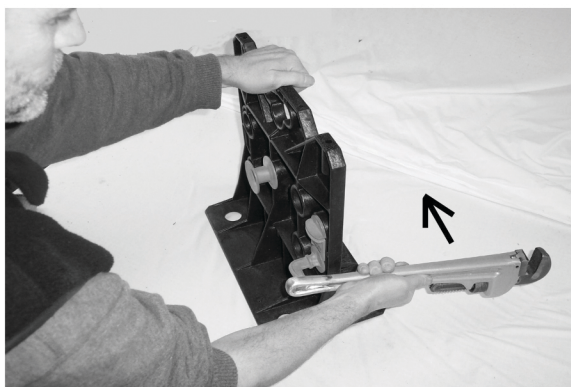


D. Hold the wrench in a horizontal position with jaws facing up and coming from behind the Rack-A-Tier. See diagram.

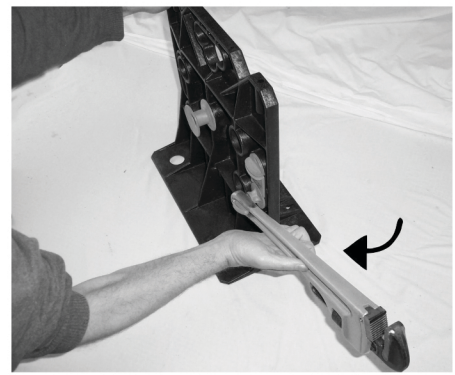


E. Slip the key hole on the wrench handle over the hook and manoeuvre the wrench around until it is at the front of the Rack-A-Tier. See diagram.

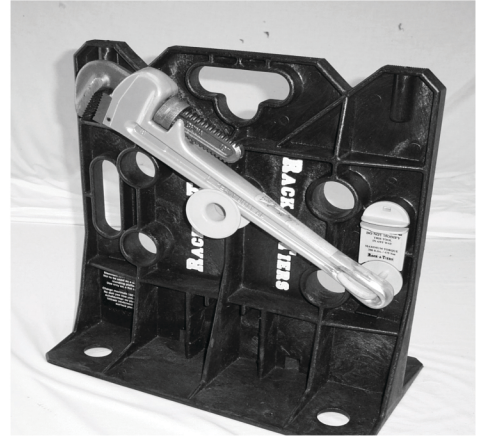

F. Rotate the wrench and place it in the tool rest. See diagram.

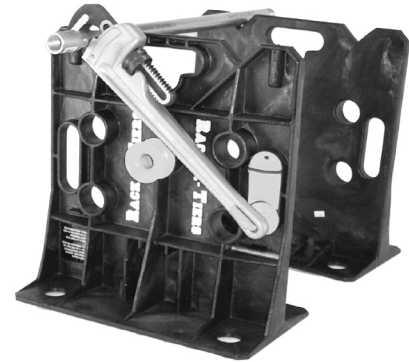

G. To engage the pipe, rotate the wrench up, place the pipe in the "V notch" and drop the wrench onto the pipe. With the jaws correctly adjusted to the work, gravity will lock the wrench in place. See diagram.

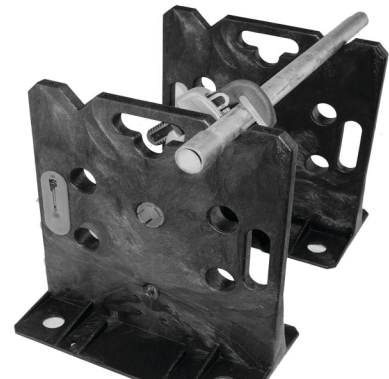

H. To hold the pipe for installing or removing a fitting, simply rotate the Rack-A-Tier with the pipe wrench to the required position. See diagram.